



UNIVERSITY OF TRENTO - Italy

## **Master of Science in Materials and Production Engineering**

### **Lab Session 4**

## **Polymer processing and analysis of products**

Laboratory activity report  
Course of Polymeric Materials Engineering

Assistance:

Dott. Haroon Mahmood

Group 1 Students:

Giacomo Mori 207674  
Veronica Pallua 206956  
Lorenzo Penna 208221  
Gabriel Orsi 207696  
Rosa Ilaria Quercia 207014  
Laura Simonini 207317  
Alessandro Sorze 207017  
Federico Vespa 206913

Trento (Italy), June 2019

Academic year 2018-19

**Abstract**

Two mixtures composed of 15% by weight of flame-retardant PP (black) and 85% of PPH-B-10-FB (white) were prepared. One mixture was subjected to compounding while the other was mixed manually before producing two samples with compression molding. the distribution of black PP in the white one is absolutely non-homogeneous, typical consequence of a manual mixing of pellets (without any homogenization mixing in between). Several samples produced by injection molding according to specific standards (ISO and ASTM) were analyzed and identified. This procedure was also useful for calculating the shrinkage to which some materials are subjected: it is clear that for reinforced materials, shrinkage is negligible due to the presence of glass fibers that give dimensional stability to the polymer; semi-crystalline polymers, on the other hand, exhibit higher shrinkage values than amorphous polymers. Lastly the diameter of six different filament samples have been measured in order to predict their mechanical properties in function of the draw ratio and the process parameters.

**1 Introduction**

The aim of this laboratory activity was to use different polymer processing techniques together with the analysis of the properties of some samples produced by the listed techniques.

**2 Materials and methods**

Two types of Polypropylene (PP) have been poured together in order to obtain a mixture with higher properties with respect to the matrix. For our purpose 15% in weight of flame retardant PP (PP HiRONIen V15 BLACK) pellet has been added to isotactic PP (PPH-B-10-FB). In Figure 1 is reported the technical datasheet of PPH-B-10-FB, while in Table ?? (Appendix) technical datasheet of PP HiRONIen V15 BLACK is reported. For compression molding a stainless steel plates with a frame of  $12 \times 12 \text{ mm}^2$  has been filled with 34 g of the mixture composed by 27.22 g of isotactic PP and 6.68 g of flame retardant PP. For injection compounding 40 g of the mixture have been weighed. In this case the mixture was composed by 34.01 g of isotactic PP and 5.99 g of flame retardant PP.

**Table III-1.** Technical datasheet of the isotactic PP (PPH-B-10-FB).


Sample	Test method	Value
MFI (g/10min)	ASTM D1238 (190 °C and 2.16 kg)	12 ± 2
Molecular weight distribution		broad
Density (g/cm <sup>3</sup> )	ASTM 1505	0.904
Atacticity	Xylene solubles	5 % max
Vicat softening point (°C)	ASTM D1525-A (9,81 N)	154
Heat deflection temperature	ASTM D648 (455 kPa)	82
Tensile strength at yield (MPa)	D638 (50 mm/min)	35
Elongation at yield (MPa)	D638 (50 mm/min)	14
Flexural modulus (MPa)	ASTM D790 (1.3 mm/min, 1% secant)	1650 max
Rockwell hardness (R scale)	ASTM D785	111

**Figure 1:** Technical datasheet of PPH-B-10-FB

### 3 Experimental activity

#### 3.1 Compression molding

Prepared amount of polypropylene mixture has been used for compression molding process. A press by Carver has been used, as illustrated in Figure 2.

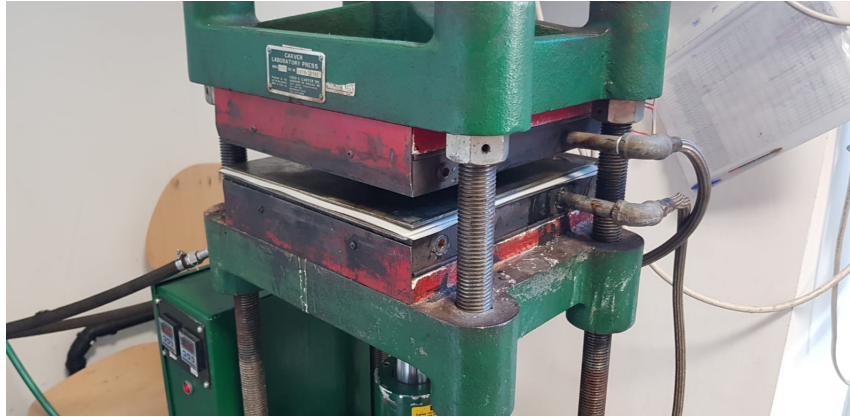

**Figure 2:** Carver press for compression molding.

The material to be pressed is put between two stainless steel plates, one having a frame of  $12 \times 12 \text{ mm}^2$  in order to produce a square plate of some mm of thickness. To avoid any adhesion with the plates, that are used to evenly distribute the pressure and to confine the melt (since the press is able to provide heat), two Mylar<sup>®</sup> foils have been put in between the steel and the material. The press has been set to produce a pressure of 8 tons, equivalent to 5.45 MPa, in the frame. The material has undergone an heat treatment under this pressure of 200°C for 10 minutes. After this, the press has been cooled with water circulating in a refrigerating circuit inside of it and the molded piece extracted. Produced plate is then visually analyzed and weighted in order to estimate weight losses.


##### 3.1.1 Compounding (internal mixer)

The process has been carried out with the instrument Thermo Haake Rheomix 600, where the polypropylene mixture undergoes a thermal treatment of 200°C for 10 minutes. Rotation speed has been set at 40 rpm.

The product obtained (Figure 3) by this process has then been subjected to compression molding, using the same parameters as Plate 1. Tangential speed of the compounder is estimated to 0.082 m/s.

##### 3.1.2 Production of dumbbell specimens

After the analysis of the plate, this has been cut to obtain ISO 527-1BA shaped specimens, that are used in another laboratory activity.

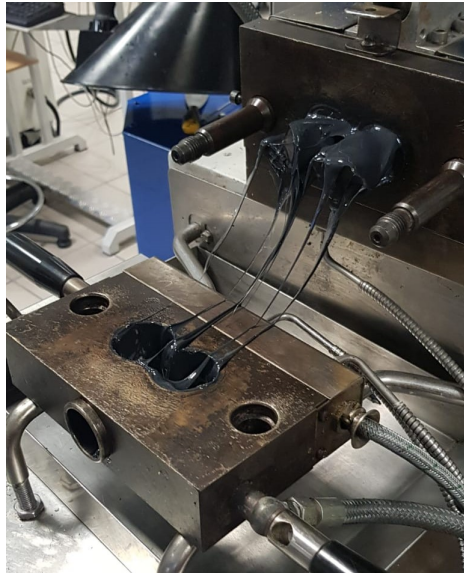

**Figure 3:** Rheomix 600 after usage. Remains of polypropylene mixture are visible.

In Table 1 the main parameters used in the processes are reported.

**Table 1:** Summary of the main parameters used in the processes

Process	Time (min)	Temperature (°C)	Pressure (MPa)	Rotational speed (rpm)
Compression molding 1	10	200	5.45	—
Compounding	10	200	—	40
Compression molding 2	10	200	5.45	—

### 3.2 Injection molding: sample evaluation

Different specimens of unknown polymeric materials have been analysed and identified. They have been produced by injection molding according to specific standards (ISO and ASTM):

- ISO  $10.0 \times 4.0 \times 172$  (mm);
- ASTM  $12.7 \times 3.3 \times 165$  (mm);

In Table 2 the types of samples are divided by standard (ASTM and ISO).

**Table 2:** Materials used in sample evaluation

ASTM dumbbell	ISO dumbbell
ABS	POM bi-injected
COC	PA11 mono-injected
PP	PP-GF 30 (white) and PP-GF35 (black)
HDPE Eltex yellow	PA6-GF50
PE/PP blend	
PA11	

Size of all specimens and the mold cavity have been measured through a caliper in order to evaluate

the shrinkage after the process according to Equation 1.

$$\text{shrinkage} = \frac{\Delta x}{x_0} \quad (1)$$

Where  $\Delta x$  is the difference between the initial and final dimension (length, width and thickness) and  $x_0$  is the initial dimension (length, width and thickness).

ASTM samples (with sprue and bar) have been weighted through the balance Mettler PM 4600 in order to compare the total weight and polymer density (taken from literature [1]).

### 3.3 Filament analysis

Different fibers provided by University of Trento (polypropylene, see Materials and Methods) have been analyzed: in particular the diameter of six different filament samples have been measured in order to predict their mechanical properties in function of the draw ratio and the process parameters. Diameters have been taken using micrometer [modello]. The filament linear density (titer, fineness) is calculated accordingly to the Equation 2.

$$t = \rho \cdot A \quad (2)$$

where  $t$  is the titer expressed in dtex,  $\rho$  is the density and  $A$  is the cross-section of the fiber, considered as circular. Titer in denier is found multiplying  $t$  by a factor 0.9. The apparent draw ratio  $DR$  is calculated using Equation 3.

$$DR = \left( \frac{D_{max}}{D_{min}} \right)^2 \quad (3)$$

where  $D_{max}$  is the maximum diameter of the collected fibers while  $D_{min}$  is the minimum diameter. The fiber strength  $T_{as}$  (tenacity as spun) is measured in  $\frac{\text{cN}}{\text{dtex}}$  and it's calculated accordingly to the Equation 4.

$$T_{as} = \frac{\sigma_Y}{100 \cdot \rho} \quad (4)$$

The tenacity after drawing  $T_{DR}$  is given by Equation 5.

$$T_{DR} = T_{as} \cdot DR \quad (5)$$

The tensile strength  $\sigma_b$  of the fibers is calculated accordingly to Equation 6.


$$\sigma_b = T_{DR} \cdot \rho \cdot 100 \quad (6)$$

where  $\rho$  is expressed in  $\text{g/cm}^3$ .

## 4 Results and discussion


### 4.1 Compression molding

The mold before and after pressing is reported in Figure 4.

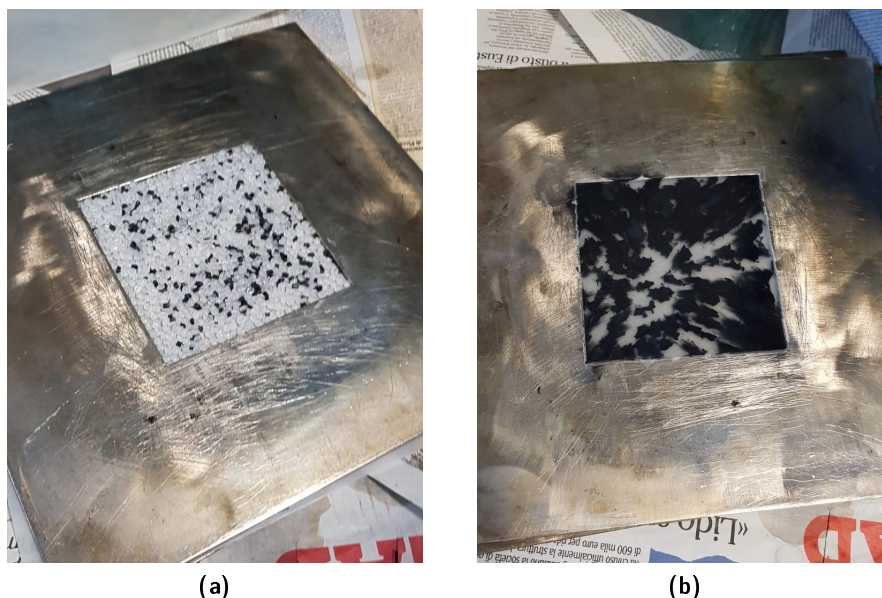

**Figure 4:** Mold (a) before and (b) after compression.

The produced plate after manual mixing is illustrated in Figure 5.

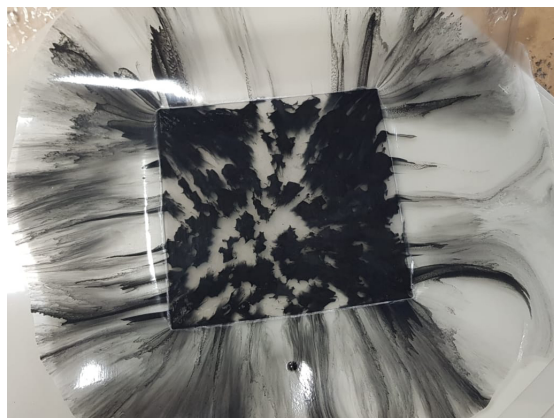

**Figure 5:** Plate produced in compression molding.

As it can be easily noted, the distribution of black PP in the white one is absolutely non-homogeneous, typical consequence of a manual mixing of the pellets (without any homogenization mixing in between). The other evident property of the pressed plate is the flash of melt outside of the mold: this is due to the too high amount of polymer inserted in the mold. The weights of the product before and after compression are reported in Table 3.


**Table 3:** Mass of the sample before and after pressing.

Mixture mass (g)	Plate mass (g)	Variation (%)
34.00	32.50	−4.41



#### 4.1.1 Compounding (Internal Mixer)

A comparison between plates after compression molding is reported in Figure 6.

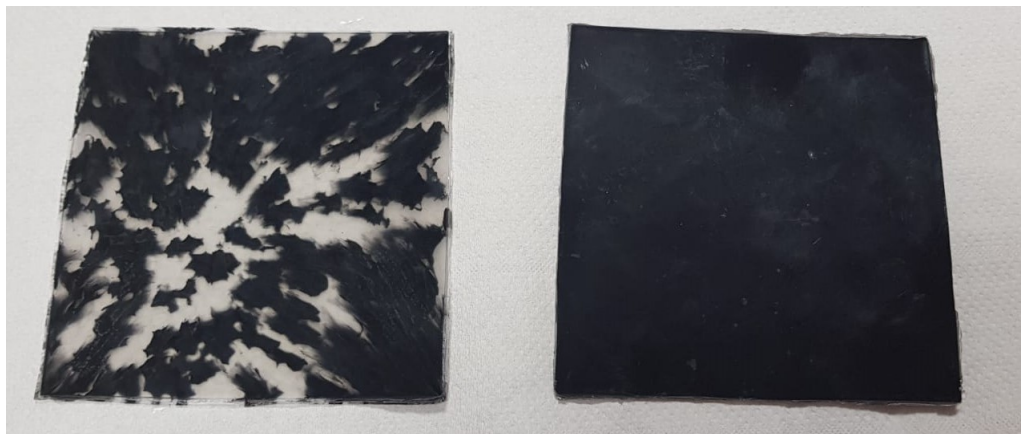

**Figure 6:** Compressed plates: plate 1 (from pellets) at left and plate 2 (from compounding) at right.

It can be seen that subjecting the sample to compounding before compression molding, a better homogeneity can be reached. The weights of the product before and after compression are reported in Table 4.

**Table 4:** Mass of the samples before and after pressing.

Sample	Mixture mass (g)	Plate mass (g)	Variation (%)
1	34.00	32.50	-4.41
2	32.05	30.50	-4.84

The table shows that the weight variation is slightly higher, that can be explained by the more difficult preparation of the sample before compression, due to its volume distribution.

#### 4.1.2 Production of dumbbell specimens

In Figure 7-a the dumbbell specimens produced in compression molding without compounding are displayed. As it can be seen, these specimens are characterized by low isotropy and homogeneity of the mixture. This will be a probable issue when mechanically testing and in resistance to flame propagation. Since the flame retardant is a weakener of strength (it introduces organics with poor adhesion and thus stress intensifiers), these specimens may have higher deformation at break than the more homogeneous ones produced in melt compounding, showed in Figure 7-b.



(a)



(b)


**Figure 7:** Produced specimens from compression molding plate after compounding.

These specimens have been then used during laboratory activity of Prof. Pegoretti for flexural tests in order to evaluate their mechanical properties according to ISO 527 standard.



## 4.2 Injection molding: sample evaluation

ISO type specimens are reported in Figure 8.

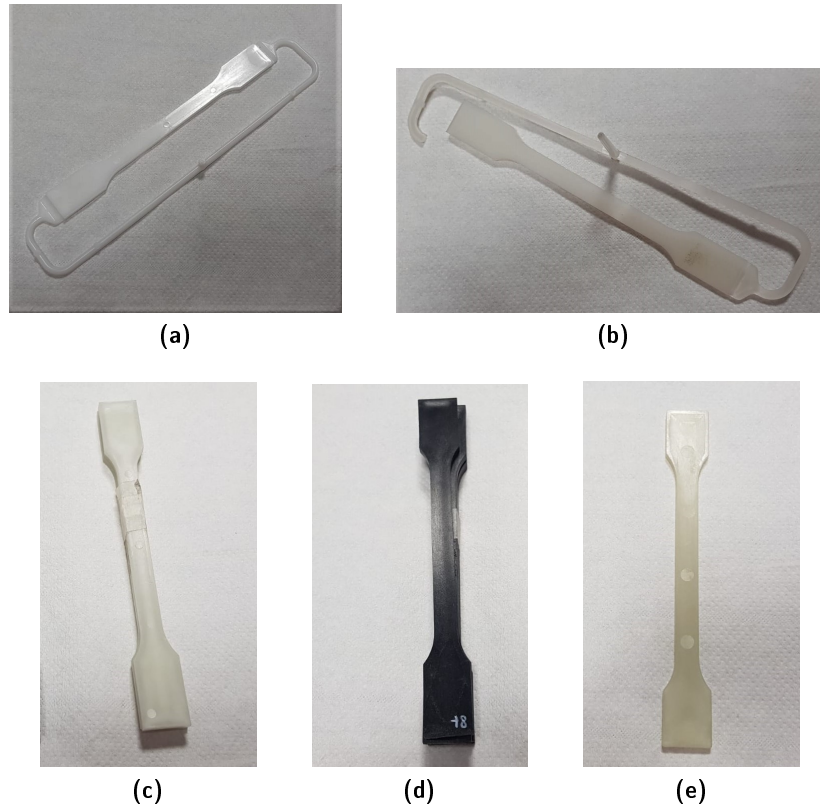

**Figure 8:** ISO samples: a) POM; b) PA11; c) PP-GF30; d) PP-GF35; e) PA6-GF50.

In Table 5 different types of ISO specimens are classified with their sizes.

**Table 5:** ISO specimens and characteristics.

Figure	Material	Size(mm)	Weight(g)	Description
a	POM	$9.74 \times 3.94 \times 167.06$	—	white and presence of cold junction
b	PA11	$9.86 \times 4.05 \times 168.98$	—	opaque and white
c	PP-GF30	$9.88 \times 4.00 \times 172.11$	10.30	white and stiff
d	PP-GF35	$9.80 \times 4.00 \times 171.86$	10.72	black and stiff
e	PA6-GF50	$9.99 \times 3.98 \times 154.71$	12.91	very stiff


It can be noticed that the higher the amount of glass fibers in the polymer, the higher is the weight of specimen.

In Table 6 the values of the shrinkage (according to Equation 1) of ISO type samples are reported.

**Table 6:** Shrinkage of ISO samples.

Samples	Longitudinal shrinkage	Transversal shrinkage	Thickness
POM	0.028	0.026	0.015
PA11	0.017	0.014	−0.012
PP-GF30	0	0.012	0
PP-GF35	0.001	0.020	0

From Table 6 it can be noticed that in reinforced polymers the shrinkage is very small, almost negligible. The presence of glass fibers gives to polymers better dimensional stability during cooling. ASTM type specimens (containing dumbbell, sprue and plate) are reported in Figure 9.

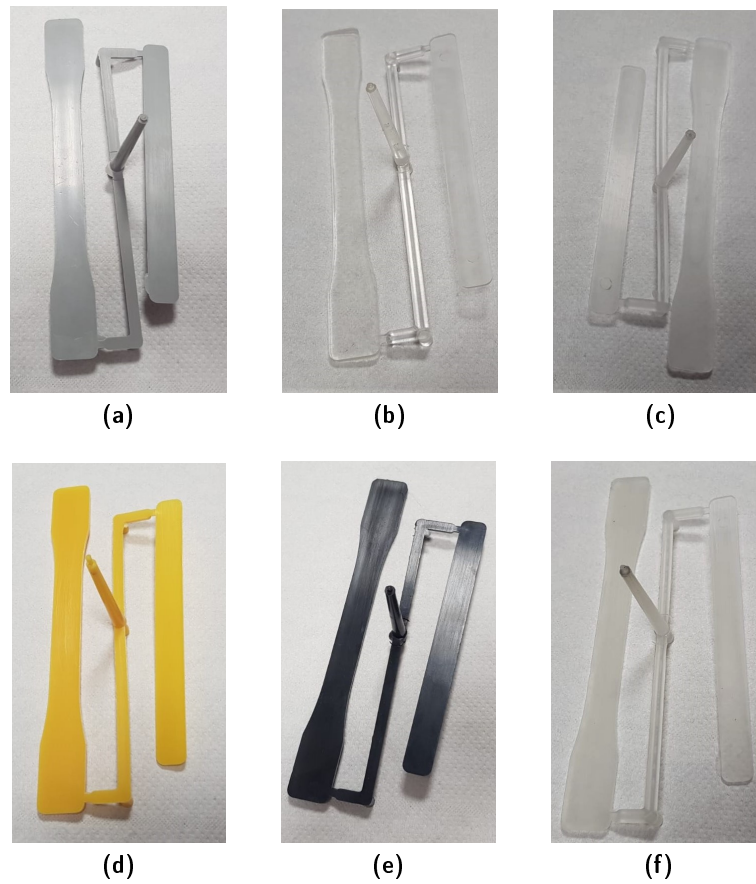

**Figure 9:** ASTM samples: a) ABS; b) COC; c) PP; d) HDPE; e) PE/PP blend; f) PA11.

In Table 7 different types of ASTM specimens are classified with their sizes.

**Table 7:** ASTM specimens and characteristics.

Figure	Material	Weight(g)	Size(mm)	Description
a	ABS	14.78	$12.77 \times 3.27 \times 163.55$	grey and flexible
b	COC	14.07	$12.64 \times 3.30 \times 164.04$	transparent and glassy
c	PP	12.28	$12.60 \times 3.35 \times 162.29$	opaque and flexible
d	HDPE	12.73	$12.54 \times 3.33 \times 160.00$	yellow and very flexible
e	PE/PP blend	13.30	$12.66 \times 3.31 \times 161.58$	matt black and flexible
f	PA11	14.00	$12.60 \times 3.35 \times 162.29$	very similar to PP

In Table 8 the values of the shrinkage of ASTM samples (containing dumbbell, sprue and plate) are reported, following Equation 1.

**Table 8:** Shrinkage of ASTM samples.

Samples	Longitudinal shrinkage	Transversal shrinkage	Thickness
ABS	0.009	−0.006	0.009
COC	0.006	0.005	0
PP	0.016	0.003	−0.015
HDPE	0.030	0.013	−0.009
PE/PP blend	0.021	0.002	−0.003
PA11	0.016	0.003	−0.015

From Table 8 it can be observed that semycrystalline polymers (such as PP, HDPE, PA11) have higher values of shrinkage respect to amorphous polymers (such as ABS and COC). Amorphous polymers have random arrangement of molecules that produces little volume changes thus lower shrinkage. The higher values of longitudinal shrinkage in semycrystalline polymers are partially compensated by the increase of the thickness (negative values of thickness shrinkage).

In Table 9 weights and densities of ASTM samples are reported.

**Table 9:** Weight and density of ASTM samples.

Samples	Weight (g)	Density (g/cm <sup>3</sup> )
ABS	14.78	1.04 – 1.12
COC	14.07	1.02
PP	12.28	0.905 – 0.94
HDPE	12.73	0.93 – 0.97
PE/PP blend	13.30	0.90 – 0.95
PA11	14.00	1.04

For PE/PP blend it has been considered a blend constituted by PE/PP 50%. From Table 9 it can be noticed that, for the same volume, weights of samples are in accordance with values of densities taken from literature [1].

### 4.3 Filament analysis

Diameter and titer measurements are reported in Table 10 according to Equation 2.

**Table 10:** Diameters and fineness measurements of collected fibers.


Sample	Diameter ( $\mu\text{m}$ )	Fineness (dtex)	Fineness (denier)
F1	34	8.2	7.4
F2	87	53.7	48.3
F3	212	319.5	287.6
F4	248	437.0	393.3
F5	147	153.5	138.2
F6	41	11.9	10.7

Tenacities before and after drawing are reported in Table 11 following Equations 3, 4, 5, 6.

**Table 11:** Diameters and fineness measurements of collected fibers.

Sample	$T_{as} (\frac{\text{cN}}{\text{dtex}})$	DR	$T_{DR} (\frac{\text{cN}}{\text{dtex}})$	$\sigma_b$ (MPa)
F1	0.304	53.2	16.2	1464
F2	0.304	8.1	2.5	223
F3	0.304	1.4	0.4	38
F4	0.304	1.0	0.3	28
F5	0.304	2.8	0.9	78
F6	0.304	36.6	11.1	1007

Accordingly to literature [1] high strength PP fibers can reach values of 2.6 GPa and 3.5% deformation at break. Since tensile strength and deformation at break follow a hyperbolic envelope, by fitting these data with the generic equation of the hyperbole (only parameter is a constant), the following can be found, expressed in Figure 10.

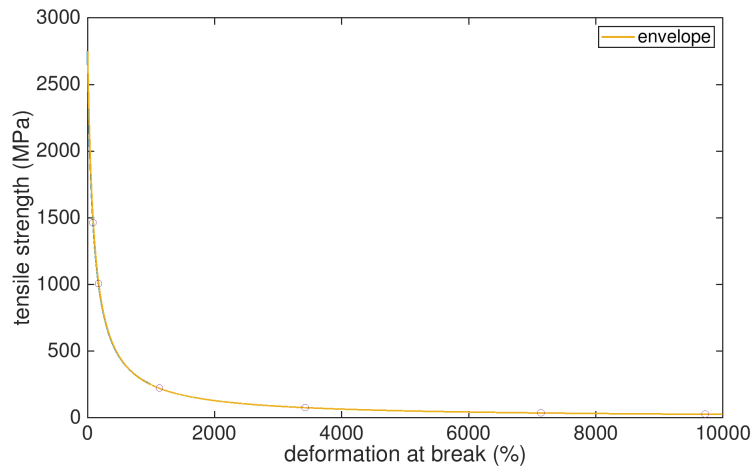

**Figure 10:** Stress-strain relation for PP fibers.

## 5 Conclusions

There are different polymer processing techniques. In this laboratory session compression molding and compounding techniques were used and samples produced by injection molding were analyzed. Several observations were made by examining the samples produced, in order to correlate the process parameters with the properties of the materials. It has been seen that a sample will be more homogeneous if subjected to compounding before compression molding; from the evaluation of samples produced by injection molding, the presence or not of shrinkage will be an index of the dimensional stability of the polymer or if it is a crystalline rather than an amorphous one; finally, by measuring the diameter of a fiber it is possible to predict some mechanical properties of the fiber itself.

## Appendices

### A Data sheet of PP HiRONIen V15 BLACK

**Table 12:** Technical datasheet of PP (HiRONIen V15 Black).

Sample	Test method	Value
MFI (g/10min)	ASTM D1238	$25 \pm 3$
Density ( $\text{g}/\text{cm}^3$ )	ASTM D792 (23°C)	$0.950 \pm 0.005$
Water absorption (%)	ASTM D570 (23°C $\times$ 24h)	$0.10 \pm 0.05$
Shrinkage (%)	ASTM D955	$1.0 \pm 0.5$
Izod with notch (J/m)	ASTM D256 (23°C)	$40 \pm 10$
Elastic modulus (MPa)	ASTM D790	$1400 \pm 150$
Behaviour to fire (1.6mm thickness)	ASTM UL94	V1



**References**

- [1] Polymer handbook, J. Brandrup, E.H. Immergut, third edition, New York, Wiley & Sons 2003.